

English

# DECT 4055

---

Caller display compatible  
digital cordless phone


*This equipment is not designed for making emergency telephone calls when the power fails.  
Alternative arrangements should be made for access to the emergency services.*

User guide

**WINDIOTIME**

<b>Location of Controls</b> .....	<b>2</b>	<b>Handsets menu</b> .....	<b>16</b>
Handset .....	2	Handset ringer volume level	16
Base unit .....	3	Handset ringer melody .....	16
Unpacking .....	3	Display information .....	17
<b>Installation</b> .....	<b>4</b>	Handset keypad sound .....	17
Location the base unit .....	4	Auto answer .....	18
Getting connected .....	4	Baby call .....	18-19
Handset battery care .....	5	Select base unit .....	19
Handset battery indicator .....	5	Handset PIN code .....	20
On/Off button .....	5	Register .....	20
Belt clip .....	6	Reset .....	21
Range warning .....	6	<b>Base units setting</b> .....	<b>22</b>
In-use time .....	6	Ringer volume level .....	22
Headset socket .....	6	Ringer melody .....	22
Handset display .....	7	Priority ringing .....	23
.....		Ring count .....	23
<b>Use</b> .....	<b>8</b>	PABX usage .....	24
Standby mode .....	8	Emergency number .....	25
Answering incoming calls .....	8	Call barring .....	25-26
Do not disturb .....	8	Least cost routing .....	27
Making an external call .....	8	PIN code .....	28
Call timer .....	9	Deregister .....	28
Last number redial .....	9	Reset .....	28
Mute .....	9	<b>Extending</b> .....	<b>29</b>
Page/Find handset .....	9	Additional base units .....	29
Keypad lock .....	9	Additional handsets .....	30
Earpiece volume control .....	10	Internal call .....	31
Memory numbers .....	10	Transferring calls .....	31
Additional network service .....	10	Paging all handsets .....	31
.....		<b>Miscellaneous</b> .....	<b>32</b>
<b>Caller display</b> .....	<b>11</b>	Show IPEI number .....	32
Viewing caller display numbers	12-13	Interference .....	32
Deleting a number from the list	14	Fault finding .....	32-33
Deleting all numbers .....	14	Approved use .....	34
Direct dialling from the call list	14	Technical data .....	34
.....			
<b>Menu settings</b> .....	<b>15</b>		
.....			


HANDSET

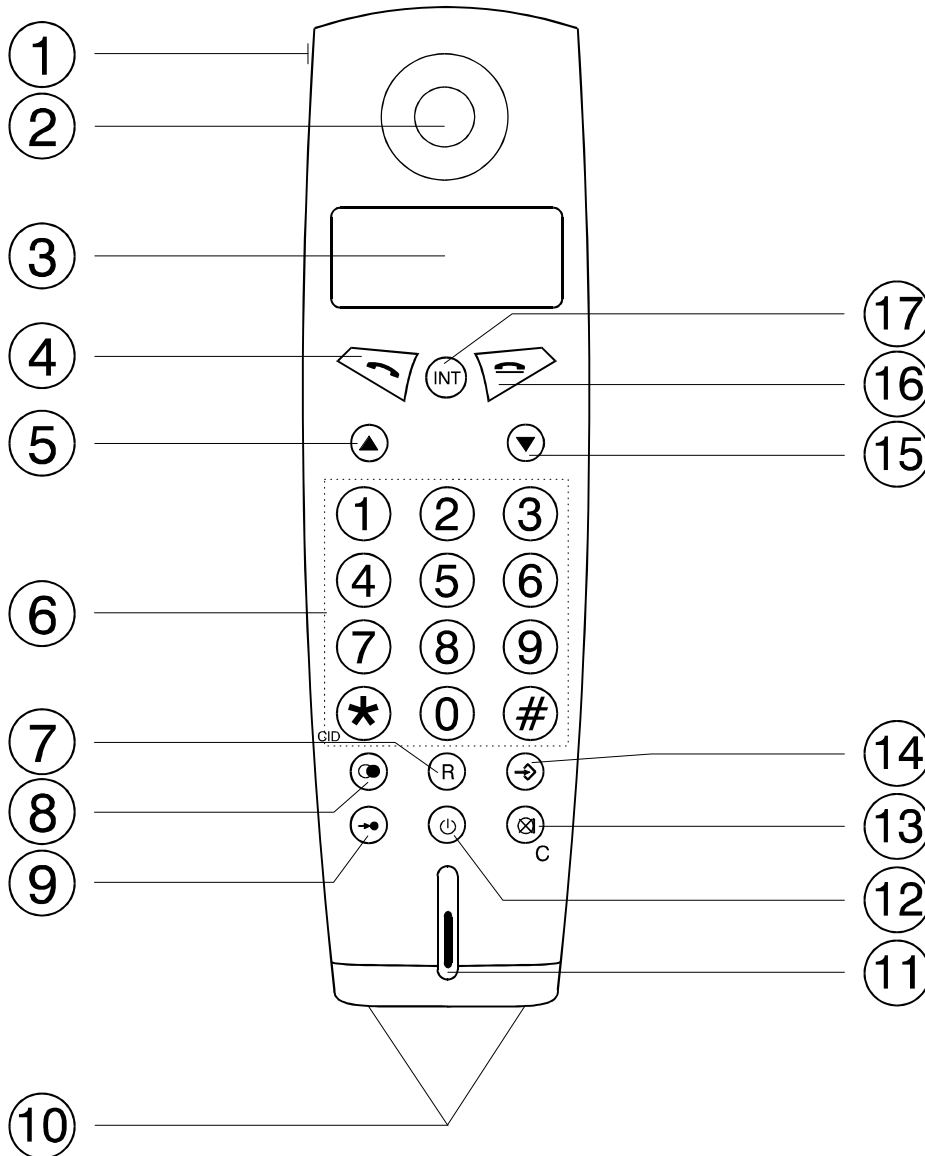

- 1 Headset socket (on the side)
- 2 Earpiece
- 3 Display
- 4 Talk button
- 5 Scroll button UP
- 6 Keypad button 0-9, \*, #
- 7 Recall button
- 8 Redial button
- 9 Memory button

- 10 Charging contacts
- 11 Microphone
- 12 On/Off-button
- 13 Mute/Cancel button
- 14 Programming button
- 15 Scroll button DOWN
- 16 End call button
- 17 Intercom call button

## BASE UNIT

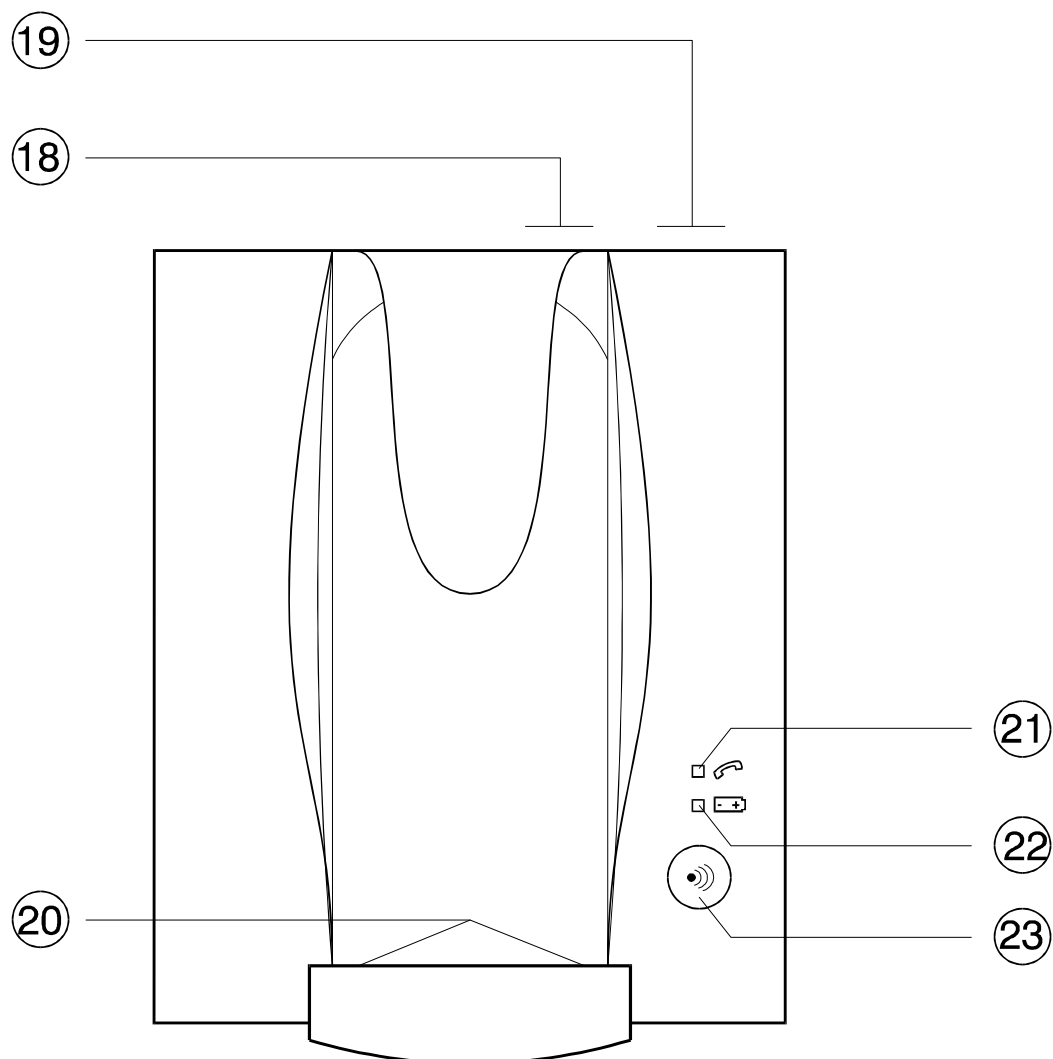

- 18 Power supply socket
- 19 Line cord socket
- 20 Charging contacts

- 21 In use indicator
- 22 Charge indicator
- 23 Paging button

## UNPACKING

In the box you should find the following items:

- Handset
- Base unit
- 2 NiMh batteries (re-chargeable types)
- Belt clip
- Power supply
- Line cord
- User guide

## LOCATING THE BASE UNIT

It is essential to the overall range and performance that the base unit and handset can receive and transmit good radio signals.

Place the base unit close to:


- a telephone network socket
- a 13 Amp mains socket

The best location is in an upstairs room and central to the area to be covered. If you experience poor range, try re-siting the base unit.

- *Do not locate in: direct sunlight, damp or high humidity locations.*
- *Do not locate close to: electrical equipment such as TV's, computers, fridges, etc., or close to radiators, metal pipes or window frames.*

## GETTING CONNECTED


- Remove the battery cover from the bottom of the handset by applying gentle pressure to the bottom of the cover and pushing away from the unit. Insert the battery (supplied), observing correct polarity. Replace the battery cover.
- Connect the power adaptor plug to the rear of the base unit and to a 13 Amp mains socket.
- Connect the telephone line to the rear of the base unit and to a telephone network socket

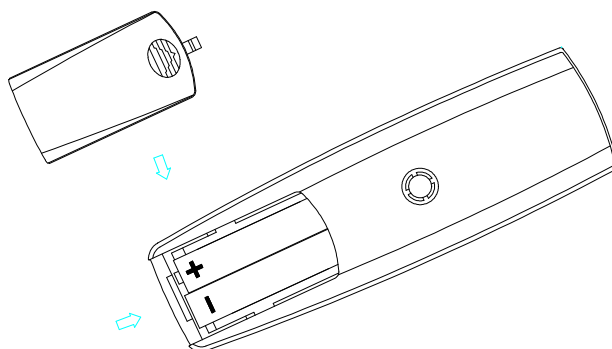

- Place the handset onto the base unit (face up or down). **Switch mains power on and leave for 8 hours.**

## HANDSET BATTERY CARE

- After initial charging the power adaptor must remain connected to the mains & base unit and mains power switched on. It is recommended that the handset is left on charge overnight to ensure maximum in-use time. The batteries should hold their charge for 110 hours, depending on use.
- If the phone is not to be used for a substantial period of time, i.e. holidays, disconnect the mains power adaptor, when power is reconnected it will be necessary to recharge the handset for 8 hours.
- The batteries will need replacing if there are signs of leakage, the batteries will not hold a charge for more than two hours.
- The rechargeable batteries (NiMH) are cadmium-free and should be disposed of in a responsible and environmentally friendly manner.

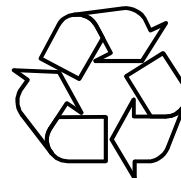

### **IMPORTANT!**

From new, the batteries (supplied) must be charged for 8 hours without interruption.

You can obtain your replacement batteries from:

Consumer support department, Doro Audioline Ltd, 22 Walkers Road, North Moons Moat, Redditch, Worcestershire, B98 9HE. Price available on request:

Telephone 01527 583800

The guarantee will be invalid if any problems arise as a result of the use of an incorrectly specified battery.

## HANDSET BATTERY INDICATOR

When the battery is empty, calls cannot be made or received. When the battery is nearly empty the indicator will begin to flash and a warning tone will be heard.

	Fully charged
	High charge
	Half charge
	Low battery
	Empty battery. A warning beep will be heard.

## **ON/OFF BUTTON**

The On/Off button (⏻) is used to switch the handset on or off. When the handset is switched off, battery power is conserved and calls cannot be made or received.

To switch off, press & hold the (⏻) button until the handset beeps, then release.

To switch on, press & hold the (⏻) button until the handset beeps, then release.

## **BELT CLIP**

A belt clip is provided with the product. This item can be connected easily to the rear of the handset by fitting it to the small rectangular holes on the sides.

## **RANGE WARNING**

If you are on a call and accidentally walk out of range of the base unit, the sound quality in the earpiece will de-grade and warning beeps will be heard.

## **IN-USE TIME**


When the battery is fully charged will the in-use time be 11 hour standby or 13 hours talk time. The times are approximately and it assume normally temperature, the battery is correct and fully charged

## **HEADSET SOCKET**

A headset can be attached to the headset socket on the left hand side. When a headset is connected, sound will not be audible through the handset microphone.

**Compatible headsets can be ordered via the Consumer Support department on 01527 583800.**

# HANDSET DISPLAY

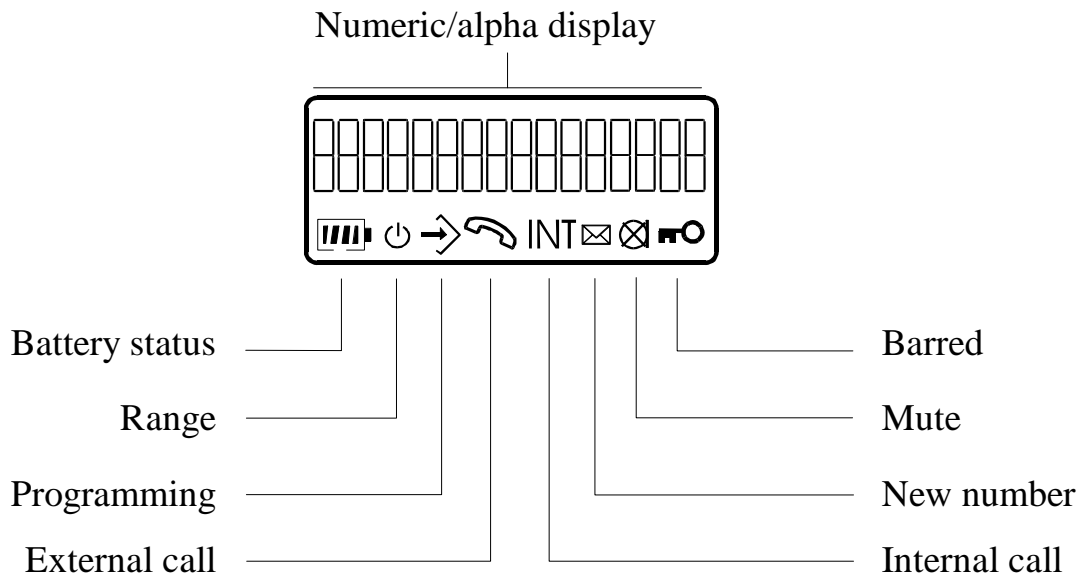

## Indicator

## Function

Battery status

- indicates the battery power status.

Range

- is on when the handset is switched on and within range.  
- flashes when the handset is out-of-range of the base unit.

Programming

- is on when programming.

External call

- is on when an external call is in progress.  
- flashes when an external call is received.

Internal call

- is on when an internal call is in progress.  
- flashes when an internal call is received.

New number

- is on when there is new number in the caller display memory.

Mute

- is on when the mute function is activated.

Barrier


- is on when calls are barred/baby call is implemented.


## STANDBY MODE

When the handset is not in-use (standby mode) the LCD display will show the handset identity number and the battery status.


## ANSWERING INCOMING CALLS

When an external call is received, the base unit will ring first and the in-use LED will flash.

# To take the call, press and release the  button **when the handset rings**. When a phone call is received the handset symbol will appear on the display. The ringer sound can be changed to personal preferences (see page 16).

To finish the call either replace the handset on the base unit or press the  button. The handset can also be programmed to connect with a call automatically when lifted off the base unit, if required (see page 18).



## DO NOT DISTURB

If you receive an incoming call, but do not want to be disturbed - press and release the  button. The handset ringer will be switched off. The ringer will be re-instated automatically when a new call is received. Note: The base ringer will continue to ring.



## MAKING AN EXTERNAL CALL

Two methods are available:

### *Method A*

- Dial the telephone number that you wish to call (the number will be visible on the display). If you dial an incorrect digit, use the **C** button to erase it.
- Press  (the number will be dialled automatically).
- To terminate the call, press .

### *Method B*



- Press the Talk  button.
- Dial the phone number (the number will be visible on the display).
- To terminate the call, press the  button.

## CALL TIMER



The length of outgoing and incoming calls will be shown on the display approximately 10 seconds after a call is connected.

## LAST NUMBER REDIAL


The last four numbers dialled are stored automatically in the memory. One or all of the numbers can be re-dialled as required.


- Press the  button until the number you want to call is visible on the display.
- Press the  button (the number will be dialled automatically).

## MUTE

If during a telephone conversation, you wish to talk privately to a third party without the caller overhearing, press the  button (the mute symbol will appear on the display). To resume the conversation, press the  button again.

## PAGE/FIND HANDSET

To page or locate a missing handset, press the  button on the base unit. The handset will ring for 30 seconds approximately.

To terminate this action, press the  button or the  button on the handset.

## KEYPAD LOCK

The keypad can be locked to prevent accidental operation when the handset is being carried.

1. Press- and hold - button # for about 1 second.

The display shows:



2. Press and hold down the # button for about 1 second to terminate the keypad lock.

If you receive an incoming call in this mode, press the talk button to answer. When the call is terminated, the keypad will revert to the locked position.

## EARPIECE VOLUME CONTROL

When on a call, the volume level in the earpiece can be increased or decreased on three levels using the ▼ and ▲ buttons.

## MEMORY NUMBERS

Ten of your most frequently used telephone numbers can be stored in the direct memory, using the keypad digits 0-9 as the storage locations.

### STORING MEMORY NUMBERS

- Press the →> button, and then →● button. The display shows "\_".
- Select the memory location number (Keypad 0-9) or scroll with →● button.
- Dial the number you wish to store (max 20 digits).
- Press the →● button.
- Continue to store other numbers, or press the →> button to finish.

If you insert an incorrect digit, you can erase it by pressing the C button. To insert a pause, press the ● button.

### DIALLING MEMORY NUMBERS

- Press the →● button and then the appropriate memory location number, keypad digit 0-9 or scroll with →● button.
- Press the 📞 button, the number will be dialled automatically.

You can also press the talk button first and then select a memory number.

## ADDITIONAL NETWORK SERVICES

The R (Recall) button can be used to access additional network services. Contact your network operator for further details.

Caller display allows you to see who is calling before you answer a call and to see who has called in your absence. When the service is implemented on your telephone line, seconds before your telephone rings the number of the incoming caller will appear on the display. Up to 39 incoming numbers can be stored in the call list. When the list is full, the oldest number will be deleted automatically.

It is not possible to view the call list and take a new call at the same time.



**WARNING!**

Caller display is an optional telephone Network service. This telephone will provide Caller Display information provided the service is available on the telephone Network and any subscription charges (if required) have been fulfilled. Check with your telephone Network operator for full details.

If the Caller display service is not implemented on your telephone line, incoming call information will not be displayed.

If the handset is registered to a different base unit, any information in the call list will be lost.

## VIEWING CALLER DISPLAY NUMBERS


The in-use indicator  on the base unit will flash and the symbol  will appear on the handset display when a new call(s) is received. Once the number(s) has been reviewed the indicator will stop flashing and symbol will not be visible on the display.


When an incoming number is received it is assigned a call sequence number which appears on the left hand side of the display, commencing with 01 ( oldest call) up to 39 (latest call).

1. Press and hold the \*button until the display shows the number of new calls and the total number of calls, then release.

1 new phone number  
on the call list


A total of 4 phone numbers  
on the call list

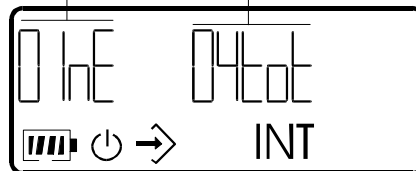

3. Press the  button to show new, unread number(s).


4. Scroll between the number with button  and  .

Button  scrolls "down" to the oldest number.


Button  Scrolls "up" to latest number.

- To terminate the review procedure, press the  button.


The display will also provide the following information:

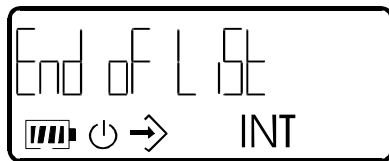


The list has been reviewed to the oldest number.

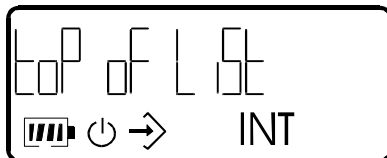


The list has been reviewed to the latest number.

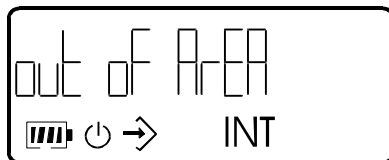

Call information is not available. It could be an international call.

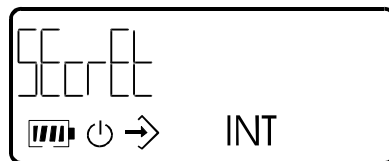

The caller has withheld their number or the number cannot be transmitted.

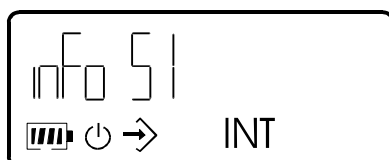

There is a message waiting. this information is available only with compatible telephone network service.

## DELETING A NUMBER FROM THE LIST

- Ensure the number you want to erase is on the display.
- Press the **C** button twice. The display will show "ErASE" and the phone number will be erased.

## DELETING ALL NUMBERS FROM THE LIST


- Ensure a call list number is on the display
- Press and hold the **C** button, until the display shows "ErASE ALL" then release..
- Press the **C** button again, all phone numbers will be erased.

## IF THE LIST IS FULL

Up to 39 incoming numbers can be stored in the call list (including "Out of area" and "Secret" information). When the list is full, the oldest number will be deleted automatically.

## DIRECT DIALLING FROM THE CALL LIST

It is possible to dial any of the numbers stored in the call list quickly and easily.

- Ensure the number you want to dial is present on the display.
- Press the  button, the number will be dialled automatically.

The DECT 4055 has a simple menu system which is controlled by five buttons:

The ▼ and ▲ buttons are used to scroll through the menus.

The → button is used to enter the menu system and confirm a setting.

The ☎ button can be used to revert back to standby mode without saving.

The C button is used to erase.

## THE MENU CONSISTS OF TWO MAIN GROUPS:

### **Handset menu**




Used to set the handset to personal preferences.

To enter: Press → followed by either of the scroll buttons.

### **Base unit menu**







Used to set the base unit to personal preferences.

To enter: Press → followed by #.

To enter the handsets menu, press  and then either  or .

## HANDSET RINGER VOLUME LEVEL (BELL LOUD)







You can change the ringer volume level in four levels: off, low, normal and high.

- Press  followed by .
- Scroll to "bELL Loud". Press .
- The display shows the current setting (OFF = off, 3 =highest level).
- Scroll to desired setting with  and  buttons.
- Press  to store your setting.

In order to hear the correct setting while programming , the key beep must be activated.

## HANDSET RINGER MELODY (BELL TYPE)


You can choose from six different melodies for the telephone ringer.

- Press  followed by .
- Scroll to "bELL tYPE". Press .
- The display shows the current setting (1 = Type 1, 2 = Type 2 etc).
- Scroll to desired setting with  and  buttons.
- Press  to store your setting.

In order to hear the correct setting while programming , the key beep must be activated.

## DISPLAY INFORMATION (BS/HS-DISP)

When the unit is in standby mode it can display the handset (hS-diSP) and base (bS-diSP) identity numbers. This information can be switched on or off.

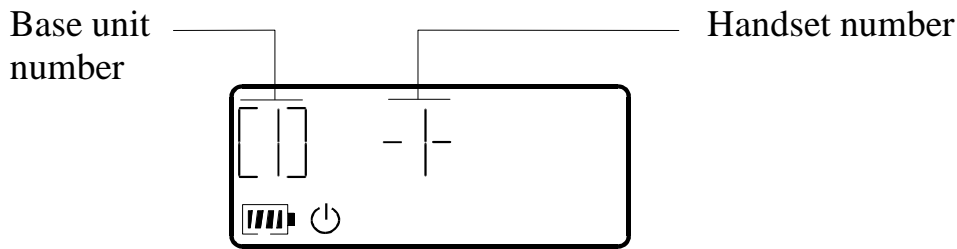

- Press followed by .
- Scroll until the display shows "bS di SP".or "hS di SP". Press .
- The display shows the current setting (on or off).
- Scroll to desired setting with or buttons.
- Press to store the setting.







## HANDSET KEYPAD SOUND (BEEP)

From new, the handset keypad is programmed to emit a confirmation beep every time a key is pressed. This beep can be turned off as desired.

- Press followed by .
- Scroll until the display shows "bEEP". Press .
- The display shows the current setting (on or off).
- Scroll to desired setting with or buttons.
- Press to store the setting.

## AUTO ANSWER (AUTO ACCEPT)





If the handset is on the base unit, this feature allows the handset to connect with a call automatically when lifted off the base unit, without the need to press the Talk button.

- Press  followed by .
- Scroll until the display shows "Au to AccEPt". Press .
- The display shows the current setting (on or oFF).
- Scroll to desired setting with  or .
- Press  to store the setting.

## BABY CALL (DIRECT NR/SET)







This feature enables the handset to be pre-programmed with an emergency number which can be dialled automatically by pressing any button (except the programming button). It is possible to answer calls even if this feature is implemented. .

### STORE THE BABY CALL NUMBER

- Press  followed by .
- Scroll until the display shows "di rEct nr". Press .
- Enter the handsets PIN-code (0000 from new).
- The baby call number will be shown in the display.
- Enter the number (max 20 digits). If you enter an incorrect digit, press the **C** button to erase it.
- Press  to store the setting.




Baby call is now activated. The display will show the keypad locked symbol.

## ACTIVATE/DEACTIVATE BABY CALL


- Press  followed by .
- Scroll until the display shows "di rEct SEt ". Press .
- Enter the handsets PIN-code (0000 from new).
- The display shows the current setting (on or oFF).
- Scroll to desired setting with  or .
- Press  to store the setting.

## SELECT A BASE UNIT (SELECT BS)

If the handset is registered to more than one base unit, you can select one base unit as a special base unit irrespective of how many base units are registered.





- Press  followed by .
- Scroll until the display shows "SELEct bS". Press .
- The display shows the current setting.
- Enter desired setting/base unit using the keypad digits.

Setting "0" means that the handset automatically select a base unit in the range.

- Press  to store the setting.





## HANDSET PIN-CODE(HS-PIN)

A four digit PIN code is provided to ensure that some of programmable setting can not be changed by unauthorised users. From new the code is set to 0000.

- Press  followed by .
- Scroll until the display shows "HS-Pi n". Press .
- Enter the handsets PIN-code (0000 from new).
- Enter the new code twice.
- Press  to store the new PIN-code.

## REGISTER HANDSET/BASE UNIT (REGISTER)





If an additional handset is added to the system, it must be registered to the base unit.

- P** Press and hold the  on the base unit until you hear a series of beeps, then release (approximately 4 seconds). You now have 30 seconds to completed the registration.
- Press  followed by .
  - Scroll until the display shows "rEgi StEr". Press .
  - Select the base units number by pressing on the keypad 1 - 4.
  - Enter the base units PIN-code (0000 from new).
  - After a few seconds, the display will show all the free handset identity numbers. Use the keypad digits to select the appropriate number.
  - The handset will enter standby mode after a few seconds.

## RESET THE HANDSET

The handset can be reset to the factory settings or the redial memory can be erased, if required.





### RESET THE LAST NUMBER REDIAL (ERASE REDIAL)

- Press  followed by .
- Scroll until the display shows "EraSE rEdi AL". Press .
- Enter the handsets PIN-code (0000 from new).
- Press  to confirm.


### RESET ALL SETTINGS (DEFAULT SET)

If this operation is performed all factory settings will be restored:

- |                                       |                                       |
|---------------------------------------|---------------------------------------|
| ! Handsets PIN-code restored to 0000  | ! Keypad beep on                      |
| ! Ring signal level restored to high  | ! Volume restored to step 1           |
| ! Ring signal type restored to type 2 | ! The display shows only the handsets |
| ! Auto answer off                     | number                                |

- Press  followed by .
- Scroll until the display shows "dEFa uLt SEt". Press .
- Enter the handsets PIN-code (0000 from new). Press .






To enter the base units settings, proceed as followed:

- Press  followed by #.

Scroll to the desired setting with the scroll buttons and follow the instructions for respective setting. For some of the settings you must enter a PIN-code (0000 from new)






### BASE UNIT RINGER VOLUME (BELL LOUD)

There are four setting available (off, low, normal and high) for the base unit ringer.

- Press  followed by #.
- Scroll until the display shows "bELL LOUd". Press .
- The display shows the current setting (OFF = off, 3 = highest level).
- Scroll to desired setting with  or .
- Press  to store the setting.



### BASE UNIT RINGER MELODY (BELL TYPE)

There are six choice for the setting of the base unit melody.


- Press  followed by #.
- Scroll until the display shows "bELL tYPE". Press .
- The display shows the current setting (1 = Type 1, 2 = Type 2 etc).
- Scroll to the desired setting with  or .
- Press  to store the setting.

## PRIORITY RINGING (PRIORITY HS)

If an additional handset(s) is added to one base unit, can you select the ring priority of incoming calls. From new, all handsets will ring.




- Press  followed by #.
- Scroll until the display shows "Pri ori tY hS". Press .

The display shows the priority handsets number.

- Enter desired handset identity number by pressing on the keypad digit, If you choose 0 all handsets will ring.
- Press  to store the setting.

## RING COUNT (RING COUNT)

When a handset has been prioritised, it is possible to select how many times it will ring before the other handsets ring.

- Press  followed by #.
- Scroll until the display shows "ri ng count". Press .
- The display shows the current setting (1-9).
- Enter the desired setting with the scroll buttons.
- Press  to store the setting.






## PABX USAGE

If you are connected to a PABX, the DORO DECT 4055 can be programmed to accept an access code and to insert a timed pause before the number is dialed.

Up to 3 different primary access codes (4 digits each maximum) can be stored. If you are connected to two PABXs and it takes one more access code and two pauses to obtain an external line, a secondary access code can be also programmed.

### STORE ACCESS CODE (ACCESS CODE)






The primary access code is identified as P-CODE0, P-CODE1, P-CODE2. The secondary access code is identified as S-CODE0, S-CODE1, S-CODE2.

- Press  followed by #.
- Scroll until the display shows "ACCESS codES". Press .
- The display will show one of the six settings.
- Scroll to desired setting with  or .
- Enter the access code. You can also use R,\* and #.
- Press  to store the setting.

If you enter an incorrect digit, use the **C** button to erase it.




### PAUSE LENGTH (DIAL PAUSE)

This feature allows you to select the time of a pause often used in dialling sequences on a PABX. From new, the setting is 3 seconds.

- Press  followed by #.
- Scroll until the display shows "di AL PAu SE". Press .
- The display shows the topically setting.
- Scroll to desired setting with  or .
- Press  to store the setting.

## EMERGENCY NUMBER (SOS SET)




Three emergency numbers can be programmed. This function is for making a call even if the call barring function is implemented. 999 and 112 are programmed from new.

- Press  followed by #.
- Scroll until the display shows "SoS SEt". Press .
- Enter the base units PIN-code (0000 from new).
- The display shows one of the programmed emergency number.
- Scroll to desired position(0-2) using the scroll buttons.
- Enter the phone number with the keypad digits (max 12 digit). If you enter an incorrect digit, press the **C** button to erase.
- Press  to store the setting.

## CALL BARRING (CALL BLOC)




Call barring can be employed to restrict use of the handset and stop users making expensive calls to international numbers or to premium rate numbers. The base unit can bar up to 3 numbers (of 8 digits each) on each handset. When call barring is enabled the keypad locked symbol will appear on the display.

Setting	Display message
No barring	bLoc oFF
Block according to call barring	bLoc nr
Block all outgoing calls	bLoc ou tGoi nG

- Press  followed by #.
- Scroll until the display shows "cALL bLOC". Press .
- Enter the base units PIN-code (0000 from new).
- Enter the identity number of the appropriate handset.
- The display shows the current setting.
- Scroll to desired setting with the scroll buttons.
- Press  to store the setting.

### **SET BLOCK NUMBER (SET BLOC NO)**

The base unit can bar up to 3 numbers of the 8 digits restrict outgoing calls.







- Press  followed by #.
- Scroll until the display shows "SEt bLOC no". Press .
- Enter the base units PIN-code (0000 from new).
- The display shows one of the barred numbers.
- Scroll to desired position (0-2) with the scroll buttons.
- Enter the number that you which to bar (max 8 digits). If you enter an incorrect digit, press the **C** button to erase.
- Press  to store the setting.

## LEAST COST ROUTING (LCR SET)

Nowadays, a growing number of telephone operators offer discounted charges on certain types of telephone calls. To take advantage of the cheaper charges you must be registered with an alternative operator and often use a special access code before you dial a telephone number. The DECT 4055 can be programmed to recognise a certain dialling code or type of call and automatically dial an access code.




Up to two access codes can be stored under either position L-code0 00 or L-code1.

## PROGRAMMING LEAST COST ROUTING

- Press  followed by #.
- Scroll until the display shows "Lcr SEt". Press .
- Enter the base units PIN-code (0000 from new).
- The display shows one of the number. Scroll to desired position (00-1) with the scroll buttons.
- Enter the number that you wish to recognise (max 5 digits). If you enter an incorrect digit, press the **C** button. Press .
- Enter the digits the LCR number (max 10 digits). Press .
- Select On or Off with the scroll buttons . Press .
- Store next position or press  to return to standby mode.

## BASE UNIT PIN-CODE (BS-PIN)




From new the base unit PIN-code is 0000. It is recommended that this is changed to a number of your choice.

- Press  followed by #.
- Scroll until the display shows "bS-Pi n". Press .
- Enter the base units PIN-code (0000 form new).
- Enter the new PIN-code twice.
- Press  to store the new PIN-code.

## DEREGISTER (DE-REG)

A handset can be deregistered from a base unit as follows:




**Note:** It is recommended that you do not deregister the master handset (handset no.1).

- Press  followed by #.
- Scroll until the display shows "dE-r Eg". Press .
- Enter the base units PIN-code (0000 form new).
- Press the corresponding keypad digit of the handset you which to deregister.
- Press  to confirm the deregister.

If there is a another registered base unit within range, it will be connected to the handset and the new handset identity number will appear on the display.

## RESET THE BASE UNIT (DEFAULT SET)

The base unit can be reset if required. If this operation is performed all factory settings will be restored.

- Press  followed by #.
- Scroll until the display shows "dEFa uLt SEt". Press .
- Enter the base units PIN-code (0000 from new).
- Press  to confirm.

The DECT 4055 can form the basis of a multi-handset DECT telephone system which will allow you to:

- Register up to 6 handset to the same base unit..
- Register up to 4 handset to same handset.
- Make an internal call and transfer calls from one handset to another handset which is connected to same base unit.
- Increase the range of handset by automatic connection to the nearest base unit.
- Register other GAP (Generic Access Profile) compatible handset to the base unit.


### ADDITIONAL BASE UNITS


By connecting several base units to one system, the range of each handset can be extended, but it is critical that all base units are within range of each other. Otherwise it may be that dead spots occur where reception is not possible. It is recommended that when a new base unit is located, a handset is used to make a call and test the range.

It is also possible to locate one base unit at home and one base unit at work, and use one handset at both locations.

*The picture on your right illustrates a system with four base units, A-D.*

*The dotted lines shows the range of each base unit.*

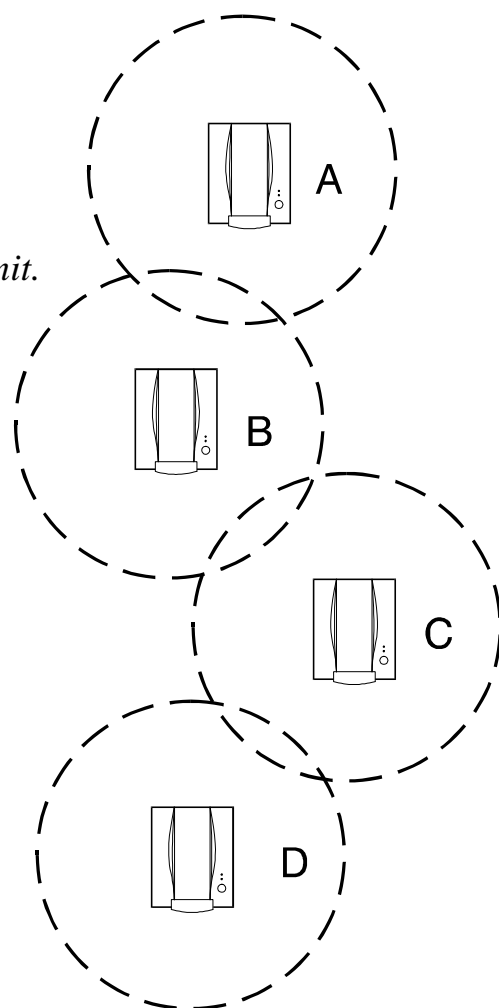

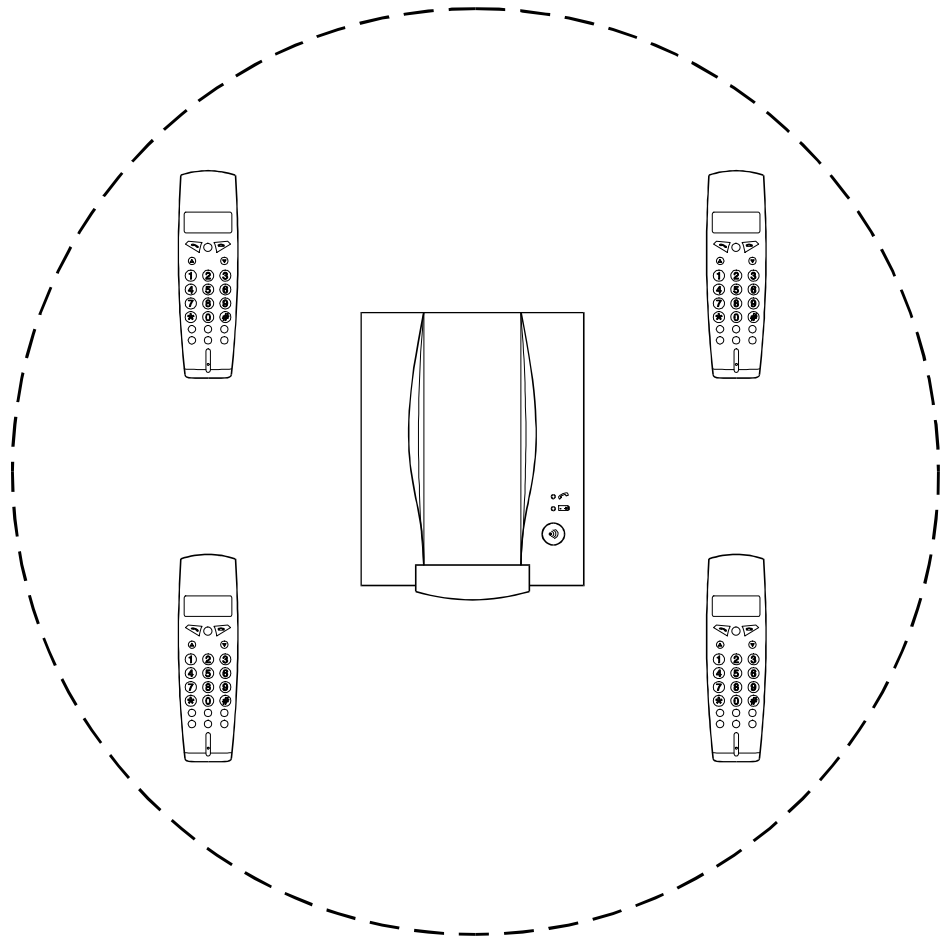

### **ADDITIONAL HANDSETS**

Adding additional handset to the system allows all users to make full use of the call transfer and intercom facilities. A maximum of one external call and one internal call can proceed at the same time.



If an additional handset is added to the system, the batteries must be charged for 8 hours without interruption. The registration procedure (see page 20) must be performed prior to use.

The registration gives each handset a specific identity number, 1 to 6. This number is used for internal calls only. From new, the handset is already registered to the base unit and has been allocated number 1.

## INTERCOM CALL

When two or more handsets are registered to the same base unit it is possible to call handset to handset. This call is not charged for by your Network operator.

### TO MAKE A INTERCOM CALL

- Press the **INT** button.
- Enter the handset number of the handset you wish to call 1 - 6.
- Press the  button on the called handset to take the call.
- To terminate the call, press the  button.

"INT" will appear on the display of the called handset. The ringer sound is also different from an external call.

If a external call is received while a internal call is in progress, a reminder tone will be heard and the in-use indicator on the base unit will flash.

To answer the incoming call, either:

a) Press the **R**. The internal call will be terminated.


*or*

b) Press the **INT** button to place the internal call on hold and answer the incoming call.

You can switch between an external call and an internal call by pressing the **INT** button.

### TRANSFERRING CALLS

A external call can be transferred from one handset to another (both handset must be registered to the same base unit).

- When an external call is connected, press the **INT** button.
- Enter the handset identity number of the handset to which the call is to be transferred.
- The called handset user presses the talk button to take the call.
- The calling handset user presses the  button to transfer the call.

If the call is not answered, press the **R** button on the calling handset to retrieve the call.

### PAGING ALL HANDSETS


To call all handsets in a system, press **INT** button and then the \* button. All handsets will ring until the call is answered.

## SHOW IPEI-NUMBER (SHOW IPEI)

The handset have a unique identity number.

- Press  .

**P** Press and hold down the **R** button until the IPEI number will be displayed.

- Press the  button to return to the standby mode.

## INTERFERENCE

All cordless telephones are radio transmitters and receivers and such are subject to interference from a wide range of sources.

*Re-siting the base unit can improve reception substantially. An upstairs room is usually the best location.*

*Electronic equipment like TV's, computers, etc. emit strong electronic magnetic fields which can affect the radio signals. Try not to locate your DECT 4055 next to this type of equipment and ensure that the power line cords are separated from other electrical units.*

## FAULT FINDING

### THE IN-USE LINE INDICATOR ON THE BASE UNIT IS FLASHING

- There is new phone number in the caller display memory.

### AN INCOMING NUMBERS IS NOT VISIBLE ON THE DISPLAY

- Have you subscribed to the caller display service?
- P** If "Out of area" or "Withheld Secret" are displayed, it either means that no information of the number is available or that the caller has withheld their number.
- Is the phone connected to a PABX? Caller display is not available when connected to a PABX.

### THE TELEPHONE DOES NOT WORK

- Is the power adaptor connected correctly?
- Is the line cord connected correctly?
- Are the batteries in the handset charged?
- Connect a different telephone to the same wall socket. If the other telephone does not work, contact your Network operator.

## **NO DIALLING TONE**

- Have the batteries been charged?
- Is the base connected to a mains power socket and mains power switched on?
- Is the telephone line cord plugged into a telephone Network wall socket?

## **WHEN ON CALL, A WARNING TONE IS HEARD**

- The batteries' power may be low (recharge the handset)
- The handset may be out of range - move closer to the base unit.

## **THE BASE UNIT DOES NOT RING**

- P Check that the ringer is programmed on.
- P Does the total of REN numbers exceed 4? If it does, disconnect other equipment until 4 is achieved.
- P Is it connected to a mains power socket and mains power switched on?

## **THE DISPLAY ON THE HANDSET IS BLANK**

- P Is the handset switched off?
- P Is mains power switched on?

## **THE BASE UNIT RINGS BEFORE THE HANDSET**

- P This is normal for all cordless telephones.

## **THE HANDSET DOES NOT RING**

- P Is the ringer programmed Off?

## **MEMORY DIALLING DOES NOT WORK**

- P Store a new number and try again.

**Technical Support:** If you cannot resolve the fault using the fault finder section, please call the Technical Helpline on: 0906 3020114 between 9AM - 5PM Monday-Friday.

**Please note that this is a Premium Line number and all calls are charged at 50 pence per minute.** Price correct at the time of going to press.

Alternatively, you can write to: Technical Support Group, Doro-Audioline Ltd., 22 Walkers Road, North Moons Moat, Redditch, Worcestershire, B98 9HE.

## APPROVED USE

The DECT 4055 is approved for connection to:

- (a) Public Switched Telephone Networks (PSTN)
- (b) Extensions via sockets provided for a direct exchange line
- (c) PABX providing secondary proceed indication.

For use with the following facilities:

- cordless telephone
- caller display
- register recall (TBR)
- automatic storage of last 10 numbers dialled
- MF signalling
- microphone mute
- memory redial of up to 4 numbers
- intercom call

This apparatus should not be used as an extension to a payphone.

This apparatus should not be connected to a shared service (party line)

Any other usage will invalidate the approval of the apparatus if as a result it ceases to conform to the standards against which the approval was granted.

In the event of a mains power failure it will not be possible to dial 999 or 112 emergency services numbers.

The power supply output and the handset charger contacts are SELV circuits as defined in EN 41003.

The equipment has been approved in accordance with Council Decision 98/482/EC for pan-European single terminal connection to the Public Switched Telephone Network (PSTN). However, due to differences between the individual PSTN's provided in the different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point.

In the event of problems, you should contact your equipment supplier in the first instance.

*Compatible countries: UK, Sweden, Switzerland, Norway, Denmark, Finland.*

**The REN number of the DECT 4055 is 1.** The REN number (Ringer Equivalence Number) determines how many telephones can be connected to your telephone line. Most normal exchange lines have a REN capacity of 4. If you exceed the REN value one telephone may not ring. If the equipment is BT supplied then, unless otherwise stated, the REN should be assumed to be 1.

## TECHNICAL DATA

Standby	:	About 110 hours
Talk time	:	About 13 hours
Range	:	>300 metres in ideal conditions.
Indirect memory	:	10 numbers
Caller display memory	:	39 numbers
Battery	:	2 x 1.2V AA NiMH type
Weight	:	Handset: 170 gm
	:	Base unit: 200 gm
Size (B x H x D)	:	Handset: 45 x 155 x 26 mm
	:	Base unit: 107 x 148 x 51 mm

Specifications may be changed without notice